




PowerFlex 520-Series EMC Cores

Catalog Numbers: 25-CORE-A, 25-CORE-B, 25-CORE-C, 25-CORE-D, 25-CORE-E, 25-CORE-RF-A, 25-CORE-RF-B, 25-CORE-RF-C, 25-CORE-RF-D, 25-CORE-RF-E

25-CORE-A...D
25-CORE-RF-A...D

25-CORE-RF-E

25-CORE-E

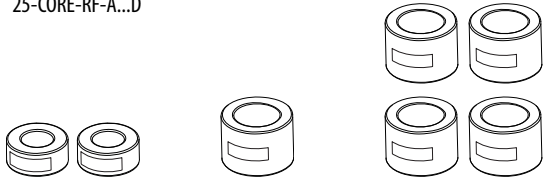

IMPORTANT EMC cores are included with:

- drives that have an internal EMC filter (25x-xxxxN114)
- external EMC filter accessory kit (25-RFxxx)

EMC Core Requirements




Frame Size	Class C1			Class C2			Catalog Number
	Enclosure	Conduit or Shielded Cable @ Input	EMC Cores Required	Enclosure	Conduit or Shielded Cable @ Input	EMC Cores Required	
100...120V AC (-15%, +10%) – 1-Phase Input with External EMC Filter, 0...120V 1-Phase Output							
A	No	No	No	No	No	No	No
B	No	No	No	No	No	No	No
200...240V AC (-15%, +10%) – 1-Phase Input with External EMC Filter, 0...230V 3-Phase Output							
A	Yes	Yes	No	No	No	Input/Output	25-CORE-RF-A
B	Yes	Yes	Output only	No	No	Input/Output	25-CORE-RF-B
200...240V AC (-15%, +10%) – 1-Phase Input with Internal EMC Filter, 0...230V 3-Phase Output⁽¹⁾							
A	*	*	*	Yes	No	No	-
B	*	*	*	Yes	No	No	-
200...240V AC (-15%, +10%) – 3-Phase Input with External EMC Filter, 0...230V 3-Phase Output							
A	Yes	Yes	Output only	No	No	Input/Output	25-CORE-RF-A
B	Yes	Yes	Output only	No	No	Input/Output	25-CORE-RF-B
C	Yes	Yes	Output only	No	No	Input/Output	25-CORE-RF-C
D	Yes	Yes	No	No	No	Input only	25-CORE-RF-D
E	Yes	Yes	Output only	No	No	Input only	25-CORE-RF-E

Frame Size	Class C1			Class C2			Catalog Number
	Enclosure	Conduit or Shielded Cable @ Input	EMC Cores Required	Enclosure	Conduit or Shielded Cable @ Input	EMC Cores Required	
380...480V AC (-15%, +10%) – 3-Phase Input with External EMC Filter, 0...460V 3-Phase Output							
A	Yes	Yes	No	No	No	Input/Output	25-CORE-RF-A
B	Yes	Yes	No	No	No	Input/Output	25-CORE-RF-B
C	Yes	Yes	No	No	No	Input only	25-CORE-RF-C
D	Yes	Yes	Output only	No	No	Input/Output	25-CORE-RF-D
E	Yes	Yes	No	Yes	No	Input/Output	25-CORE-E
380...480V AC (-15%, +10%) – 3-Phase Input with Internal EMC Filter, 0...460V 3-Phase Output⁽¹⁾							
A	*	*	*	No	No	Input/Output	25-CORE-A
B	*	*	*	No	No	Input/Output	25-CORE-B
C	*	*	*	No	No	Input/Output	25-CORE-C
D	*	*	*	No	No	Input/Output	25-CORE-D
E	*	*	*	No	No	Input/Output	25-CORE-E
525...600V AC (-15%, +10%) – 3-Phase Input with External EMC Filter, 0...575V 3-Phase Output							
A	Yes	Yes	No	No	No	Input/Output	25-CORE-RF-B
B	Yes	Yes	No	No	No	Input/Output	25-CORE-RF-B
C	Yes	Yes	No	No	No	Input/Output	25-CORE-RF-C
D	Yes	Yes	No	No	No	Input/Output	25-CORE-RF-D
E	Yes	Yes	No	Yes	No	No	-


IMPORTANT An enclosure, shielded input cable, and EMC cores are not required to meet class C3 requirements.

(1) An (*) indicates that EMC requirements are not met.

For more information, see "Installation Requirements Related to EN 61800-3 and the EMC Directive" in the PowerFlex 520-series user manual, publication [520-UM001](#).

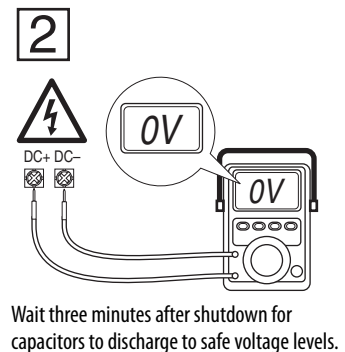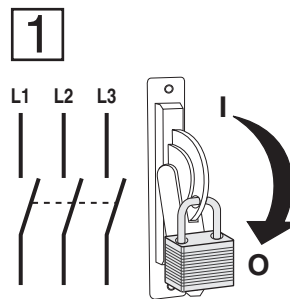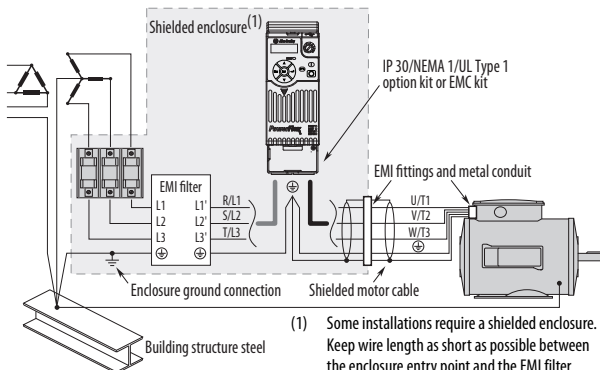

Recommended Placement of EMC Cores

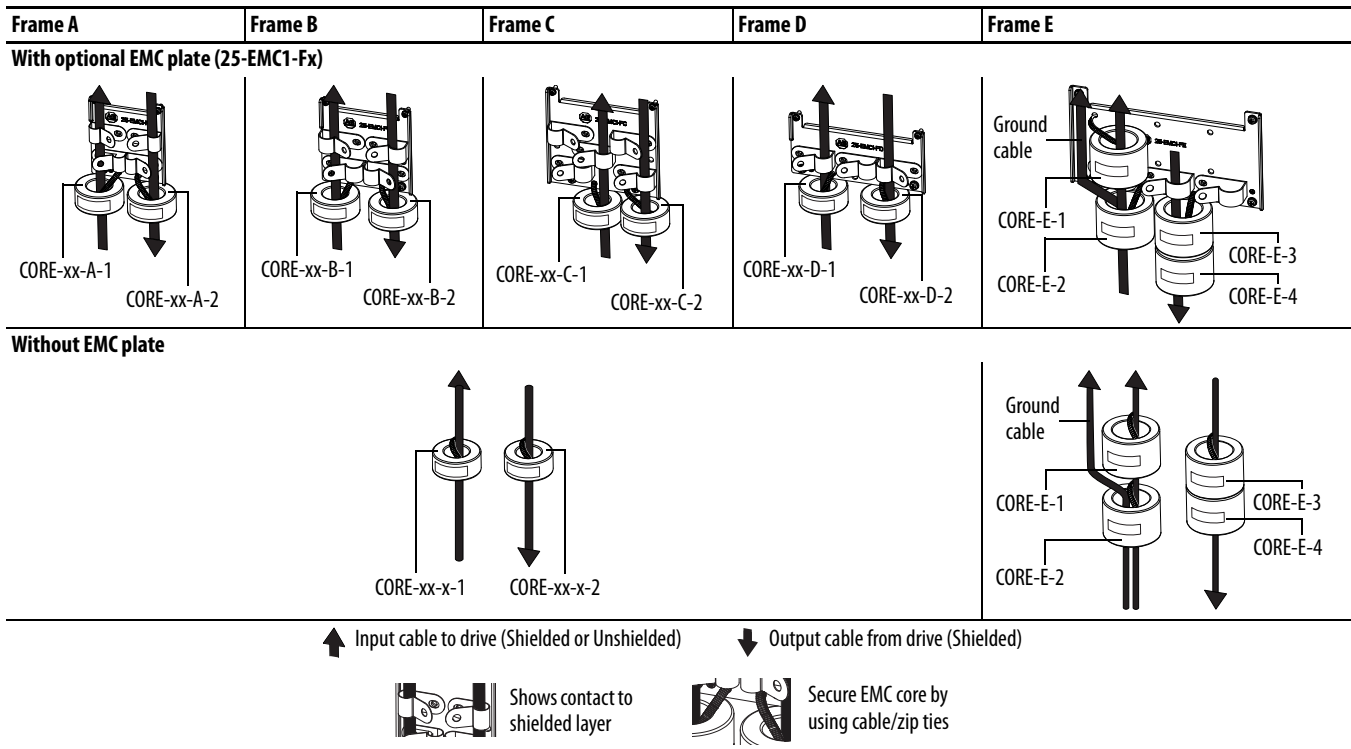


IMPORTANT

The ground cable/shield for both input and output must pass through the EMC core(s), except for the following:

- Frame E drives with internal filters where the grounded input cable must not pass through EMC CORE-E-1.
- 600V drives with external filters where the grounded output cable must not pass through the EMC core(s).

Recommended Placement of EMC Cores Relative to External Filter

All Frame sizes

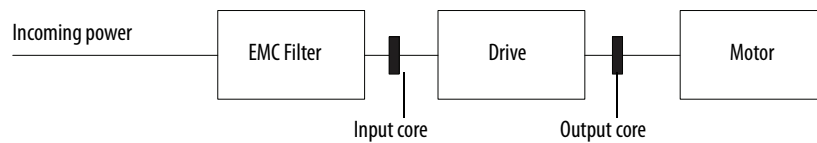

U.S. Allen-Bradley Drives Technical Support - Tel: (1) 262.512.8176, Fax: (1) 262.512.2222, E-mail: support@drives.ra.rockwell.com
 Online: <http://www.ab.com/support/abdrives>

Allen-Bradley, Rockwell Software, Rockwell Automation, PowerFlex, and TechConnect are trademarks of Rockwell Automation, Inc.
 Trademarks not belonging to Rockwell Automation are property of their respective companies.

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444
 Europe/Middle East/Africa: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640
 Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846